



Install: Manual Trans Console Upgrade

Part Number: S-2301FUA00081N

WORK INSTRUCTION OVERVIEW

⚠ WARNING

- DO NOT ATTEMPT THIS PROCEDURE IF YOU DO NOT HAVE PROPER TOOLS, TRAINING, AND FACILITIES.
- Read and follow all instructions provided when installing this product. Failure to do so may result in placing occupants at risk of serious injury or death.
- To protect bystanders and the service technician(s), shut vehicle off, remove the Ignition Key and secure vehicle to prevent unintended movement.
- Never operate the vehicle in excess of manufacturer's specifications.

NOTICE

For Vehicles with Manual Transmission Only.

TOOLS REQUIRED

- | | |
|---|--|
| <ul style="list-style-type: none"> ◦ 10 mm Socket ◦ Socket Driver | <ul style="list-style-type: none"> ◦ Torque Wrench (N•m) ◦ Protective Eye-wear |
|---|--|

TORQUE SPECIFICATION

Tighten each fastener to the torque specification below:

- **M6 Hex Bolts** – 7.0 N•m (±1.0 N•m)

KIT COMPONENT TABLE


Component	Description	Qty
	M/T Console Upgrade P/N: S-2301FUA00081N	1

INSTALLATION PROCEDURE


1. Depress button and fully engage parking brake.



2. Move (2) Seat Belt Buckles aside and remove (2) M6 Hex Bolts. Retain (2) M6 Hex Bolts for later use.

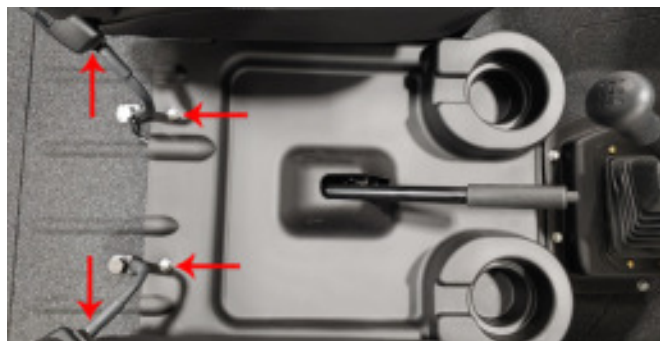

3. Remove (4) M6 hex bolts from shift boot trim and remove center console. Retain (4) M6 Hex Bolts for later use.

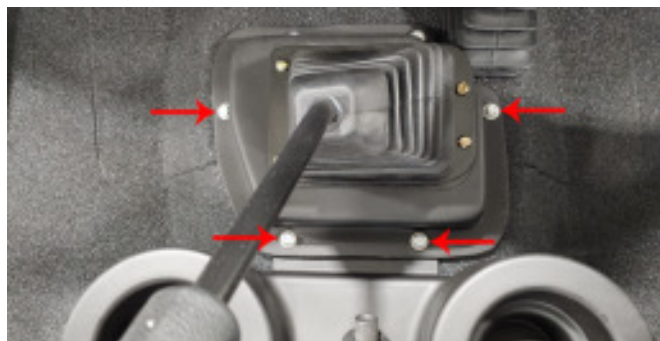

4. Slightly lift rear of shifter boot and Install M/T Console Upgrade.





Install: Manual Trans Console Upgrade

Part Number: S-2301FUA00081N

5. Return seat belt buckles to operating position and torque (6) M6 hex bolts to specifications.

